


# VERiclean®: Surface Hygiene Indicator



**VERiclean Test Kit**

“In all cases, the results obtained were consistent and easy to interpret and were attainable within one minute of sampling the surface.” [Figure 1]

- Ginny Moore and Chris Griffith, “Hygiene checks - the next generation,” *International Food Hygiene*, vol.13, no.7

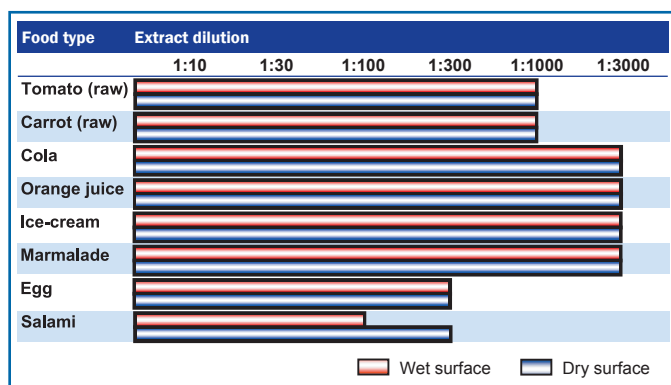

**Figure 1:** The detection of residual food debris from a wet and dry stainless steel surface, using the VERiclean surface test.

## VERICLEEN AT A GLANCE

- ▶ Detects: Organic residue found on unknown surfaces and hand
- ▶ Method: Merely wet, wipe, and watch
- ▶ Economical: Needs no instrument
- ▶ Fast: 5 to 60 seconds
- ▶ Results: Accurate and repeatable

## SIMPLIFIED SURFACE MONITORING

VERicleen provides an inexpensive rapid hygiene test with many food/healthcare applications. VERicleen is simple to use, conveniently packaged and easy to interpret. There is no equipment, no special skills or training needed. VERicleen is a powerful tool for cleansing programs, hand washing, hygiene compliance, and overall sanitation monitoring.

## PROVIDING HYGIENE SAFETY

Organic residues can be nutrients for bacterial contamination, and they impede disinfectant and sanitizer effectiveness.

VERicleen validates the quality of cleaning of both product contact surfaces and employee hands by detecting organic material.

# VERicleen: Surface Hygiene Indicator

## RECOMMENDED FOR:

Airlines  
 Auditors  
 Beverage Processors  
 Butcher Shops  
 Caterers  
 Cleaning Companies  
 Commissaries  
 Custom Blending  
 Cruise Ships  
 Dairy Producers  
 Day Care Centers  
 Delis  
 Fast Food Chains  
 Food Distributors  
 Food Processors  
 Health Inspectors  
 Hospitals  
 Hotels  
 Nurseries  
 Nursing Homes  
 Restaurants  
 Schools  
 Supermarkets

## PROCEDURE

①




**Wet:** If surface is dry, wet with 3 or more pumps of Wetting Liquid. Enough liquid must be present on surface to absorb into test when surface is wiped.

②



**Wipe:** Wipe surface with absorbent region of VERicleen. Check that Wetting Indicator is dark (indicating test strip is sufficiently wet).

③

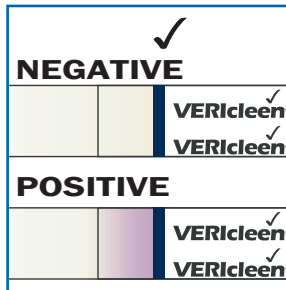

**Watch:** Purple color formation within 1 minute indicates presence of organic residues and need to re-clean.



Supplier Details:

### VERICLEEN: [CODE: VERICLEEN-50K]

- ▶▶ 50 VERicleen tests in a black snap cap container
- ▶▶ 1 bottle of Wetting Liquid with atomizer
- ▶▶ Instruction leaflet

### VERICLEEN: [CODE: VERICLEEN-100K]

- ▶▶ 100 VERicleen tests in a black snap cap container
- ▶▶ 2 bottles of Wetting Liquid with atomizer
- ▶▶ Instruction leaflet

## Charm Sciences, Inc.

659 Andover Street, Lawrence, MA 01843-1032, USA

Tel: +1.978.687.9200 | Fax: +1.978.687.9216 | Email: info@charm.com | www.charm.com

© 2013 Charm Sciences, Inc. Charm and VERicleen names are registered trademarks of Charm Sciences, Inc.

MRK-053-002 1013

